



# Wall or Moat Wall Installation

## Hot Vines/Roots


Mick Hilleary, Total Habitat  
mick@totalhabitat.com

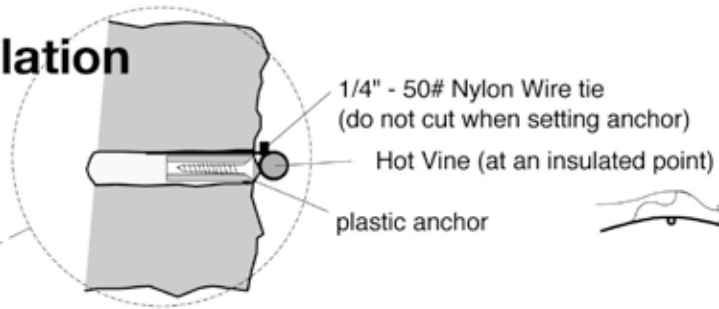

Example of adding a continuous horizontal copper wire (Thinly painted to knock down shine) (tentacle to tentacle)

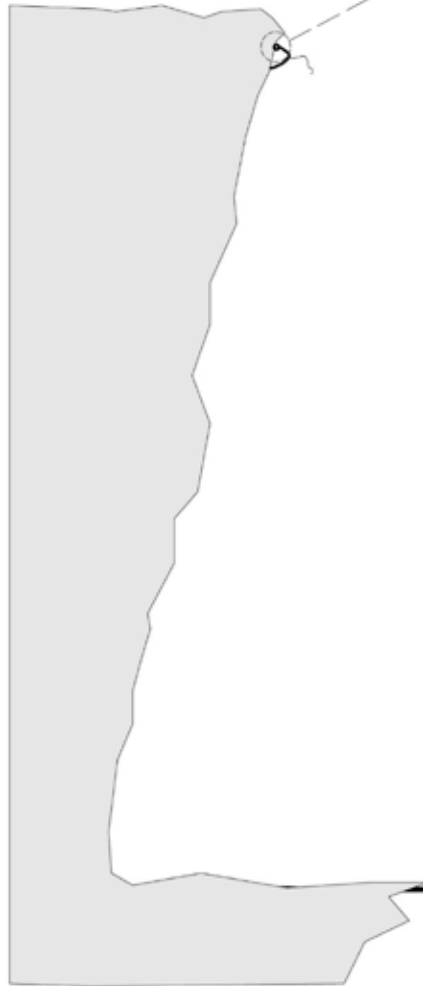

Moat Wall Profile

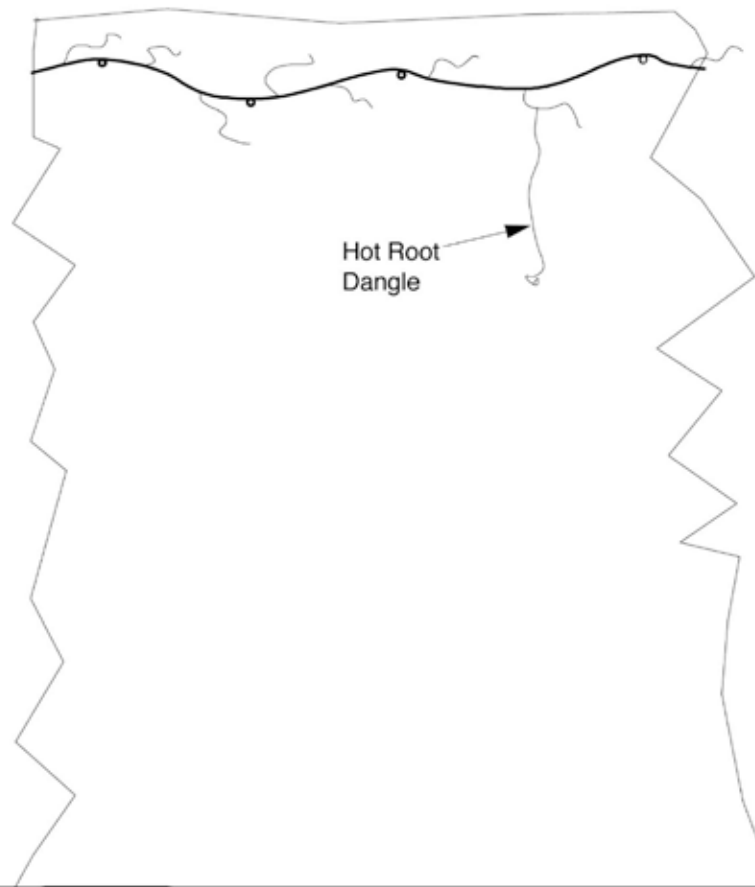

Moat Wall Elevation

### Typical Vine/Root Mount

#### Installation Notes:

- Drill all insulator holes first 24" c.c.
- Test fit Vine/root harness (attach only at insulated points on the vine/root - some bending and arranging will be required to avoid tentacles touching a grounded surface)
- Do not cut nylon ties when setting anchor
- Check for shorts prior to electrifying.

#### Finish Details

- Some pruning and add-ons (of bare copper wire - thinly painted to knock down shine) will be required to custom fit this installation
- Touchup painting: Use the SMALLEST amount of thinned paint (1:1 water/latex paint) needed to take out shine - Do Not glob on paint
- Call with questions, Mick, 316-644-5848